

Cross Section of Molding

Kit is universal size and consists of

- 1 ea Backwall section
- 1 ea Left front section
- 1 ea Left top section
- 1 ea Right front section
- 1 ea Right top section
- 10 ft. 5/16" Butyl tape 3M #8621
- 5/16" thick, 1/2" wide

Cross Section of Molding installed

Installation


Measure the distance between the drywall at the back wall. Trim or sand the molding sections to size with a hacksaw. Cut the Butyl tape in 2" pieces, fold double as needed and stick to the nailing flange and drywall at 8" intervals. Press the molding in place. Repeat with the rest of the sections. Caulk all around the edges.

Material

Matching gelcoat fiberglass
Install with butyl tape and caulk

Application

For use on remodel where drywall is cut out to install the shower. This avoids replacing the drywall.

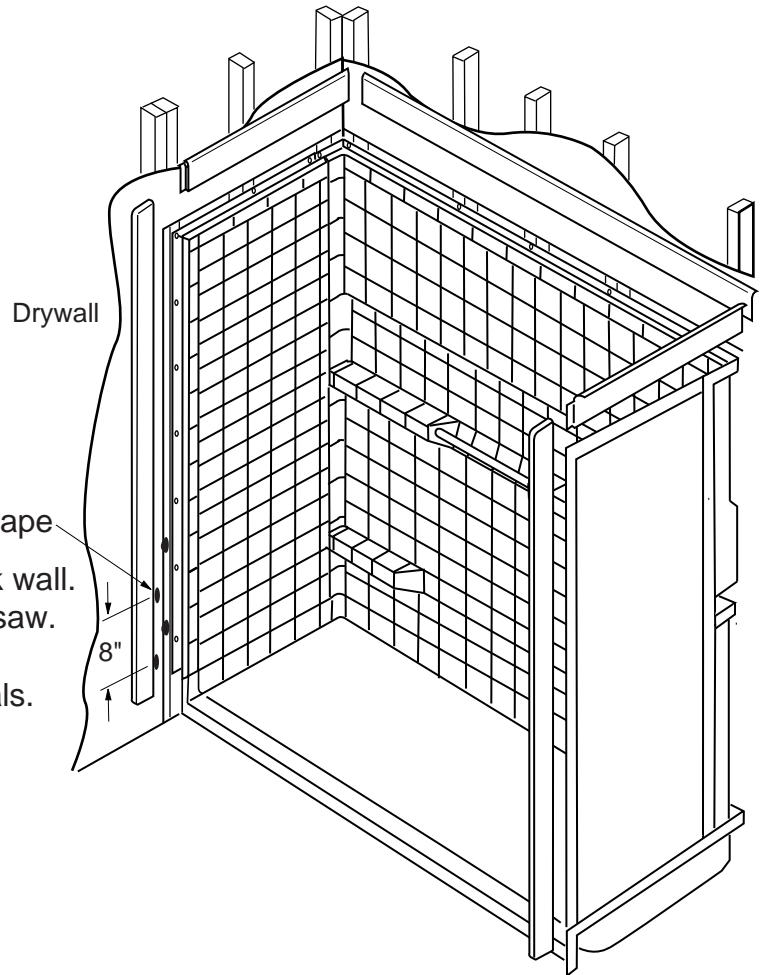

Moldings shown before installation



Flange Trim Kit for Remodel #FTK-R-25-3

BEST BATH SYSTEMS	TITLE: Flange Trim Kit for Remodel	SCALE :
Div. of Fiberglass Systems, Inc.	MODEL : all	SHT. 1 of 1